





FLASH STARTER MAINTENANCE

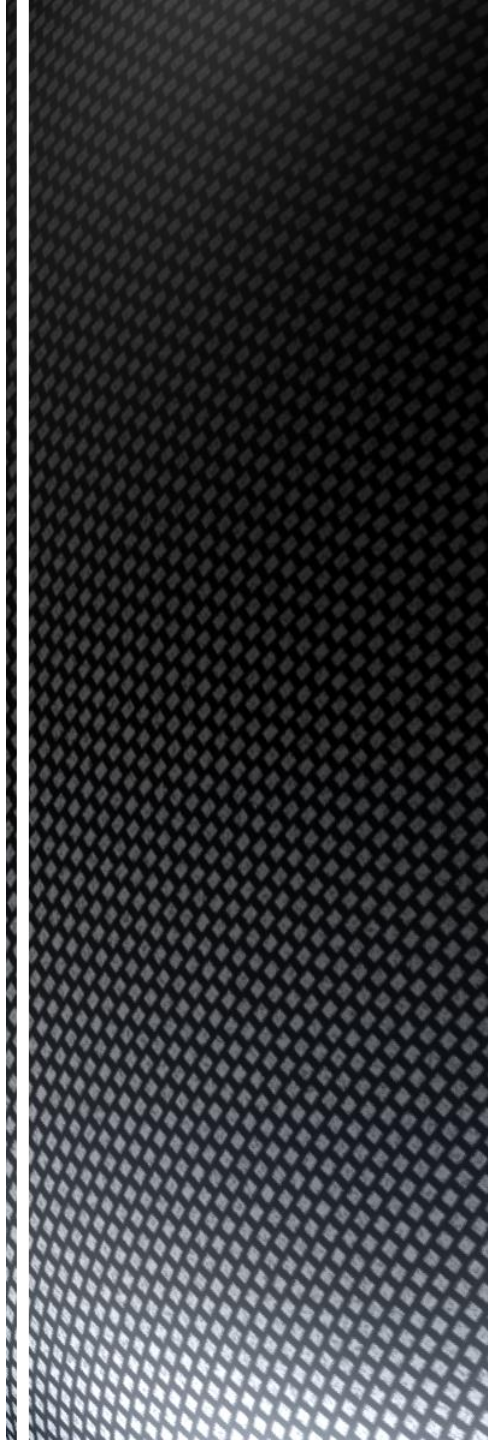


HOW TO SAFELY REMOVE THE SPRING

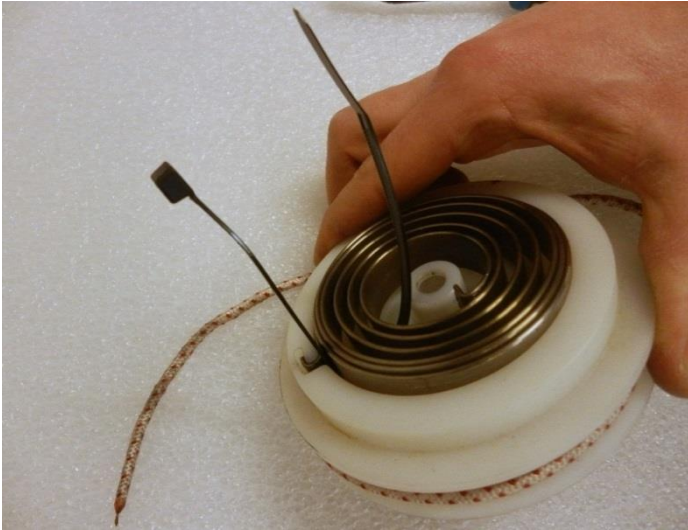

Lift up the spring to insert a safety clip in this specific position. This is to avoid that the spring unrolls and hits someone

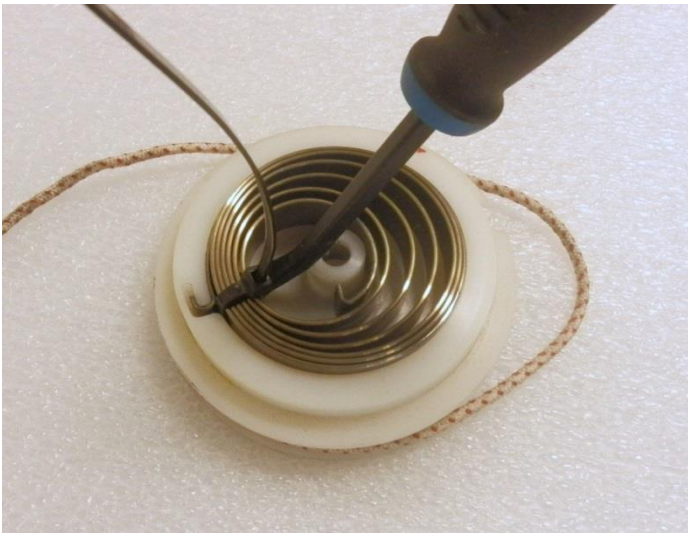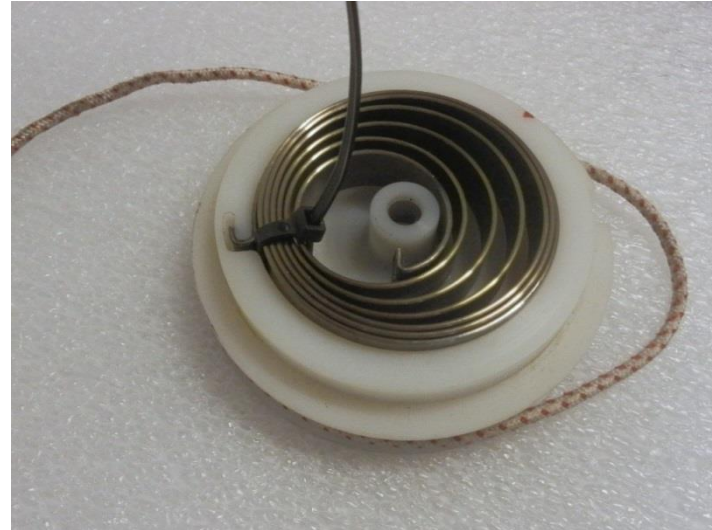

Remove the spring using as a lever a large and flat screwdriver

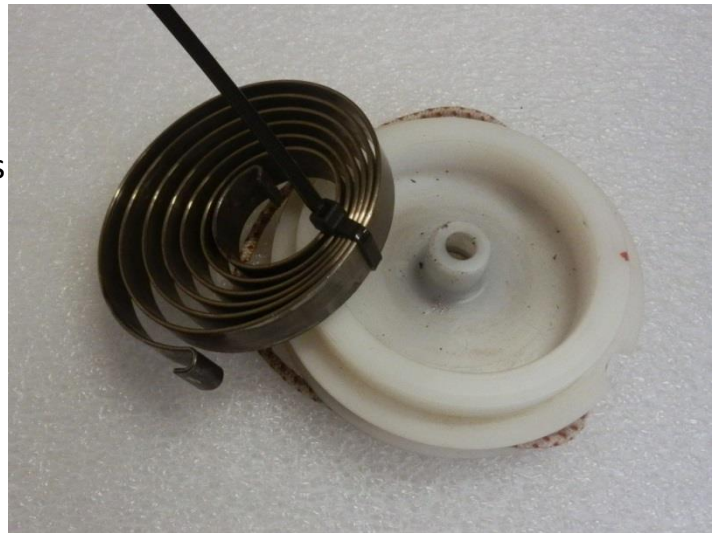

HOW TO ASSEMBLE THE FLASH STARTER



Make a knot to the rope and press it in a vice



Fill the hole with hot glue and make sure the glue doesn't exit from the edge of the hole








Press in the
small spring,
to get this
result →




Press in the
big spring
with the help
of a metal
bar, keeping
the bar in
this specific
position

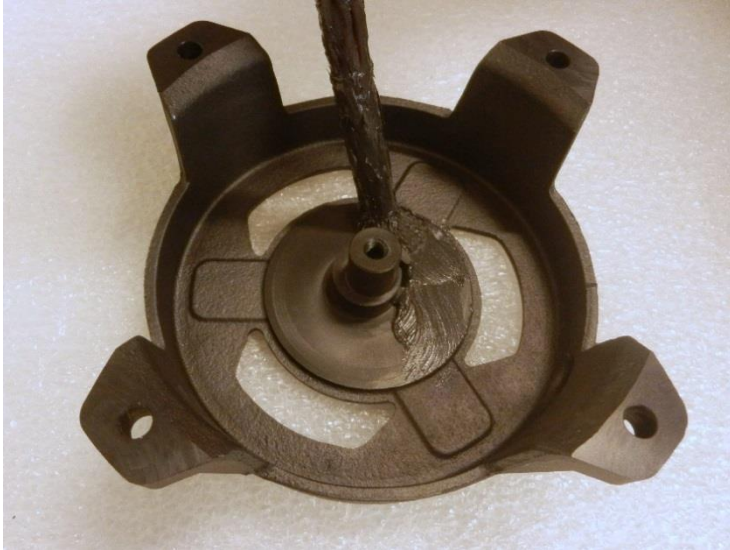

Grease the bottom of the flash starter and insert the thin plastic disk

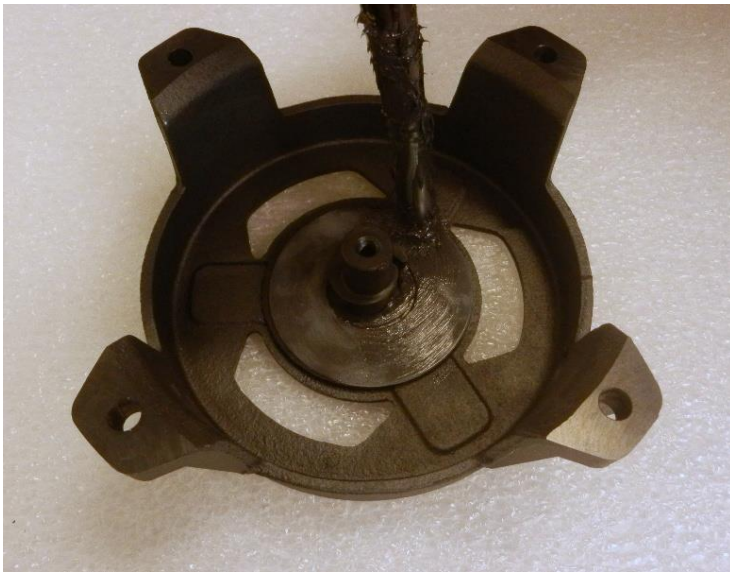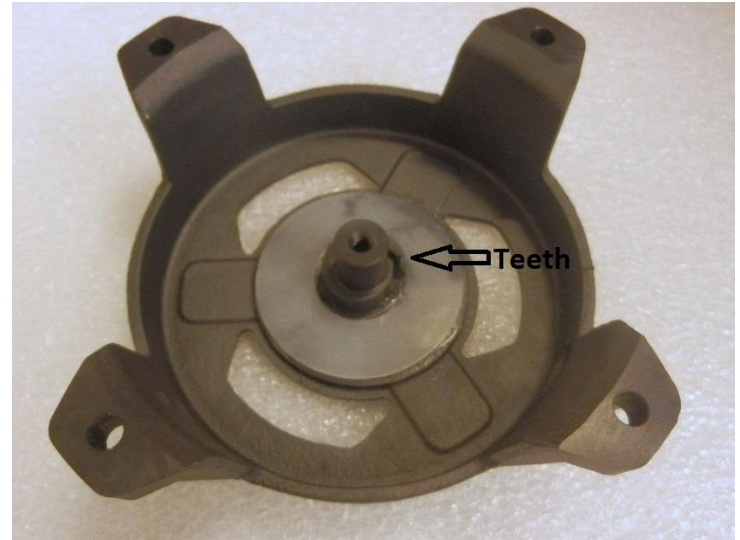

Grease also the upper part of the plastic disk and the central hub of the flash starter, paying attention not to dirty the thread of the hub

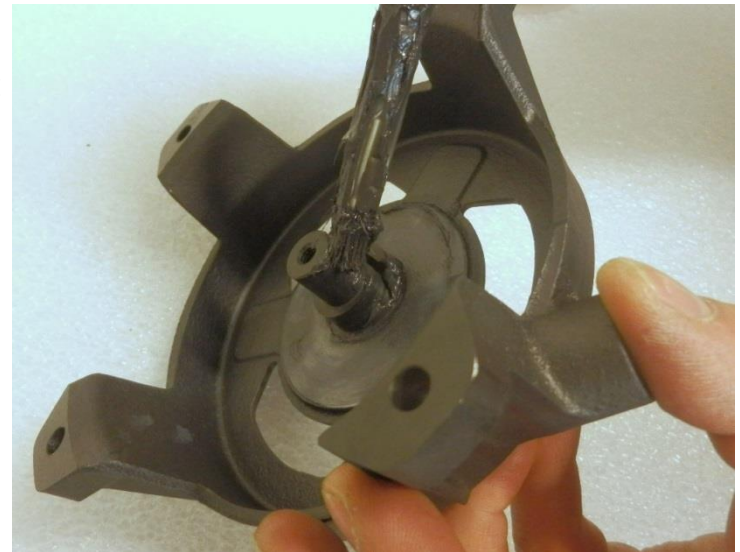



Insert the pulley paying attention to fix the small spring in the teeth of picture 2 of previous page




Pre-charge the spring making only one turn of the rope and let it exit from its seat with the help of a hook



Insert in the rope the black rubber washer and the handle and tie them





Grease the lower part of the pulley driver and the internal part of the big spring

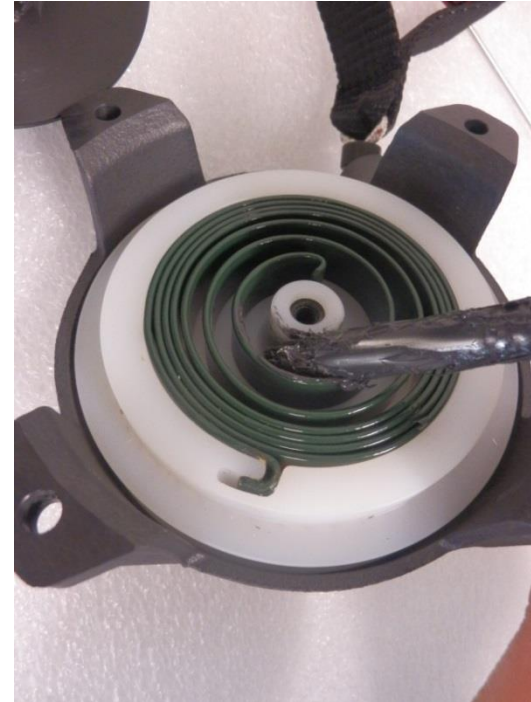

Place the pulley driver in its seat



Take the tigger bolt and screw it on the pulley driver, using strong glue on the thread of the screw. Tighten the screw very firmly.

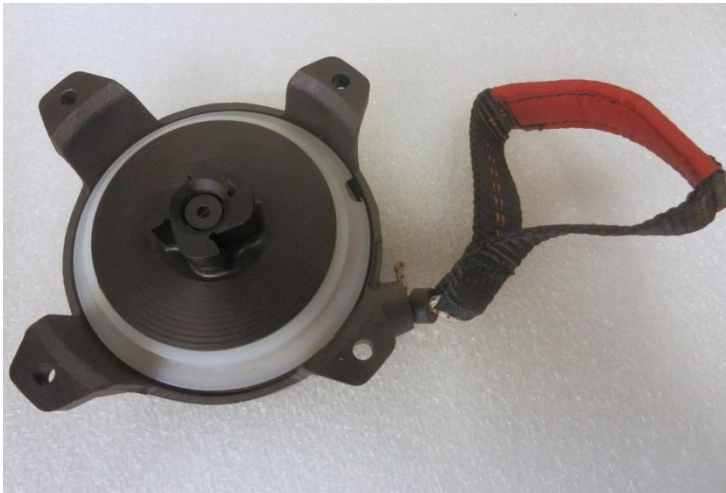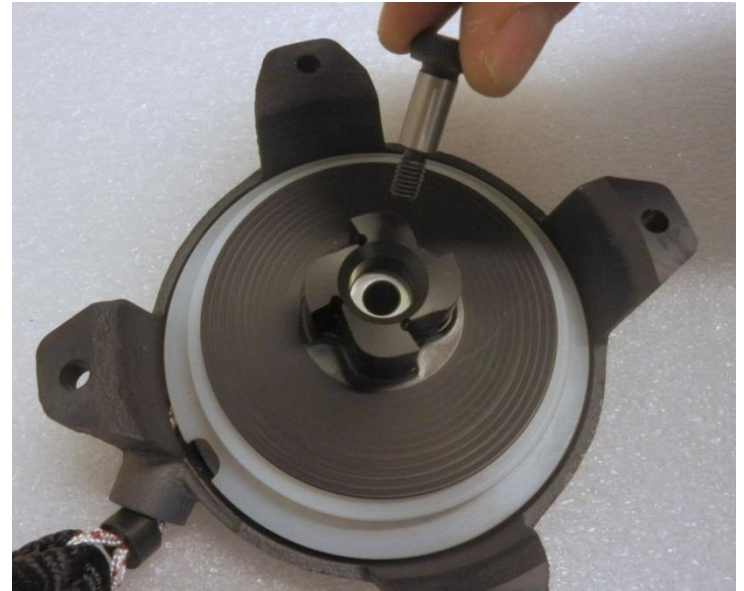

Here you go, the flash starter is ready!